

Model: 6000A Play
Version: Various

IMPORTANT!

The firmware version may differ depending on the version of your unit. You can locate your firmware version by cycling the menu until **VER-***** is visible on the display or long press the standby button when powering on your device. Please contact your local distributor or audiolab directly in case of any issue in identifying the correct version.

6000A PLAY

- Units with GDV in the version number, please update with the **.bin** file located in in the folder labelled **GD MCU_V1.033_GDV**
- Units with GCV in the version number, Please update with the **.bin** file located in in the folder labelled **GD MCU_V1.033_GCV**
- Units with no special code in the version number (ie. no GDV or GCV), please update unit with the **.bin** file located in the folder labelled **ST MCU_V1.033**

Update instructions:

- 1) Copy the *appropriate** '6000AP.bin' file to the root file of a USB drive
**from the correct file location (as per above)*
- 2) Turn off the power supply to the 6000A Play (rear panel mains switch)
- 3) Insert the USB drive to the 'UPDATE' USB socket
- 4) Push and hold the front panel standby button
- 5) Power on the 6000A Play unit (rear panel mains switch)
- 6) Release the standby button – update will complete automatically. The display will indicate 'FINISH' when the update is complete, after approximately 5 seconds. You may remove the USB drive.

**** Update process complete ****

Note:

All rights reserved ©IAG Group Ltd.
 IAG reserves the right to alter the design and specifications without any notice.
 Audiolab is a member of the International Group. www.audiolab.co.uk

The software file is specifically designed only for **audiolab 6000A Play** ONLY

audiolab cannot be held responsible for loss of information or problems resulting from a failed installation. However, in case of unsuccessful installation please contact your local distributor for further support.